

# LED King Kong Strobe 8P

## Display Function:

Display mode		Function Instruction
1	A001 (A001-A512)	Address code selection
2	Chnd	5CH/9CH channel mode selection
3	Au01-Au2	12 built-in program effects are selected, and the 12th effect is a collection of the first 11 program effects. In this mode, press "Enter" to enter the speed adjustment interface, 001-255. The larger the value, the faster the effect changes.
4	Soul/Sou2/Sou3	Soul sound mode 1, strobes once when there is sound, does not flash when there is no sound
		Sou2 sound mode 2, Strobe when there is sound, not flash when there is no sound
		Sou3sound mode 3, Cycle through all built-in effects when sounding, and turn off when there is no sound
5	FAN	ON/OFF Smart fan control on/off

## DMX Channel Function (5/9 channels):

Channe1	5CH Channel mode	9CH Channel mode
CH1	0-255 total dimming, from dark to bright	0-255 total dimming, from dark to bright
CH2	0-255 strobe, from slow to fast	0-255 strobe, from slow to fast
CH3	128-255 exposure for 3 seconds	128-255 exposure for 3 seconds
CH4	0-255 macro function	0-255 macro function
CH5	0-255 demo effect speed adjustment (in combination with CH4)	0-255 demo effect speed adjustment (in combination with CH4)
CH6		0-255 The 1st set of lamp bead brightness adjustment, from dark to bright
CH7		0-255 The 2nd set of lamp bead brightness adjustment, from dark to bright
CH8		0-255 The 3rd set of lamp bead brightness adjustment, from dark to bright
CH9		0-255 The 4th set of lamp bead brightness adjustment, from dark to bright